

Mounting instructions – Primex Lightwall ‘Module’ (100mm)

Delivery contents:

- 4 profile pieces with LED Modules and power supply
- 8 locks with 32 screws and flat washer
- 1 Allen key
- Wallmount
- (2 textiles with rubber lip all around)

Additionally you need:

- Drill machine
- Dowels
- Screws

(please make sure, that the mounting materials are suitable for your wall)

Mounting – step by step

1

Connect corner

Take a profile piece and put two locks in the according rails in the profile.
Put another profile piece on the locks.



2

Tighten up screws


Tighten the four screws of the locks with the Allen key.



3

Connect and tighten all corners

Repeat step 2 with all locks and profile pieces.
Equip the last profile piece with the 4 left locks and put it on the 3 already mounted profiles.
Tighten all screws as described in step 2.

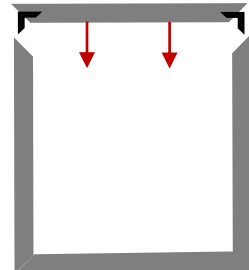

4

Connect electronics

Connect the red-white cable by the Wago clip with the red cable. Connect the white cable by the Wago clip with the black cable.
(Connection: Put the cable into the clip, close the clip with the orange switch)



5

Wall mounting

Drill holes into the wall in the desired places and put the dowels in. Put the L-hooks into the dowels. Hang the frame on the hooks, so the hooks fit into the last rails of the frame.



6

Insert textile

Insert the textile with the rubber-lip into the according notch of the frame. Make sure that you hold the rubber-lip right, since otherwise, the textile will not fit in the frame: fold the rubber lip slightly inwards (90°) and put it into the notch (see image right).



Attention: In one-sided frames the LEDs are placed closer to the back of the profile (closer to the white backside textile).
For an equal lighting, the printed textile has a bigger distance to the LEDs.